


Qwest® Standard Modem: Actiontec® GT701

How to Configure DMZ Hosting


A computer configured for DMZ hosting is available publicly on the Internet and exposed to all Internet traffic.

Note: We strongly recommended implementing proper security measures for any device exposed to the Internet.

1. Enter "192.168.0.1" in the Address bar of your Internet browser, which automatically opens the "General Status" page. Select the **Advanced Setup** tab.

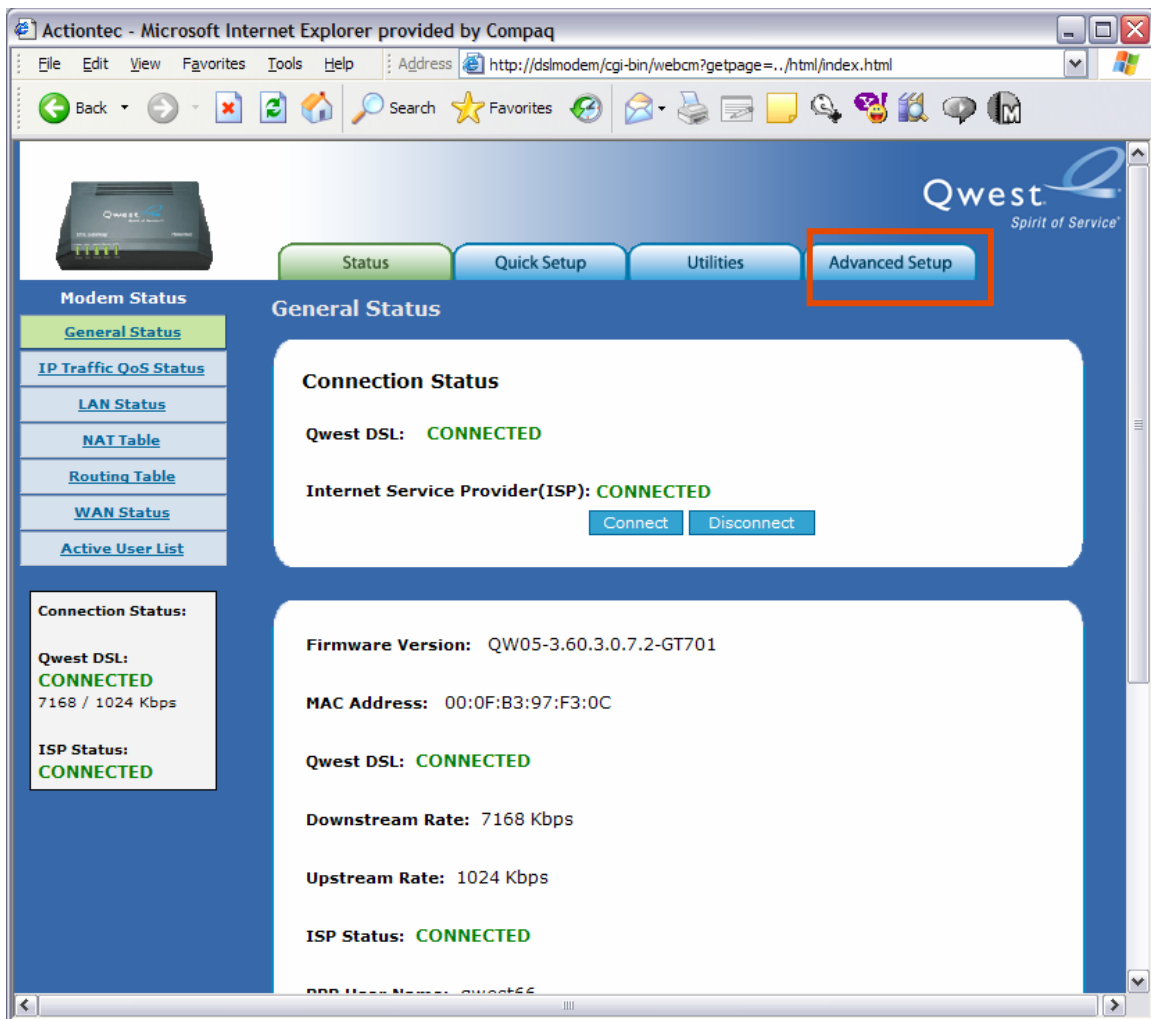


2. Scroll down and select the **DMZ Hosting** link.

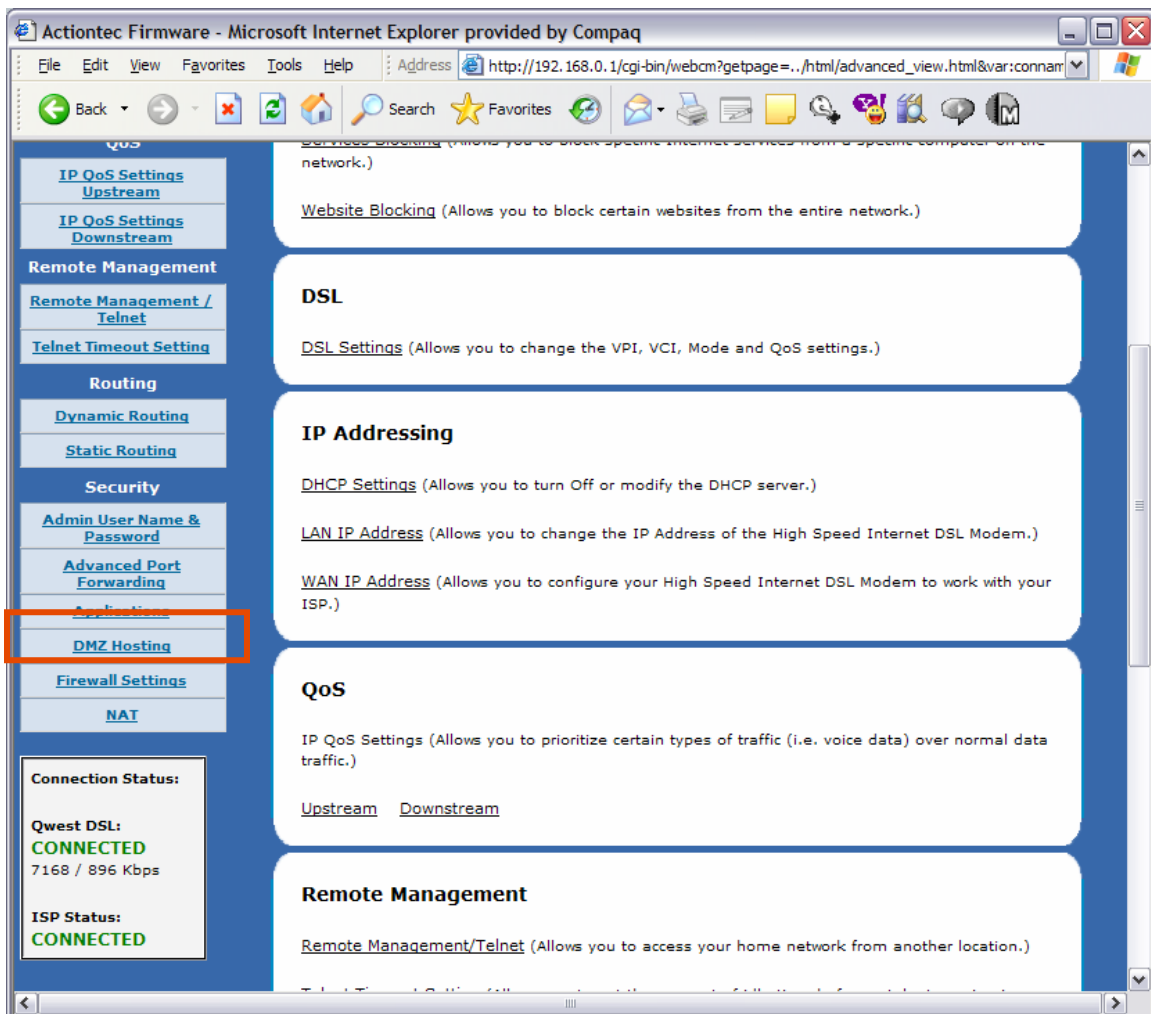

3. Select the **On** radio button. Then, type the **DMZ Host IP Address** of the computer you want to configure for DMZ hosting.

Then, select **Apply** to save your settings.

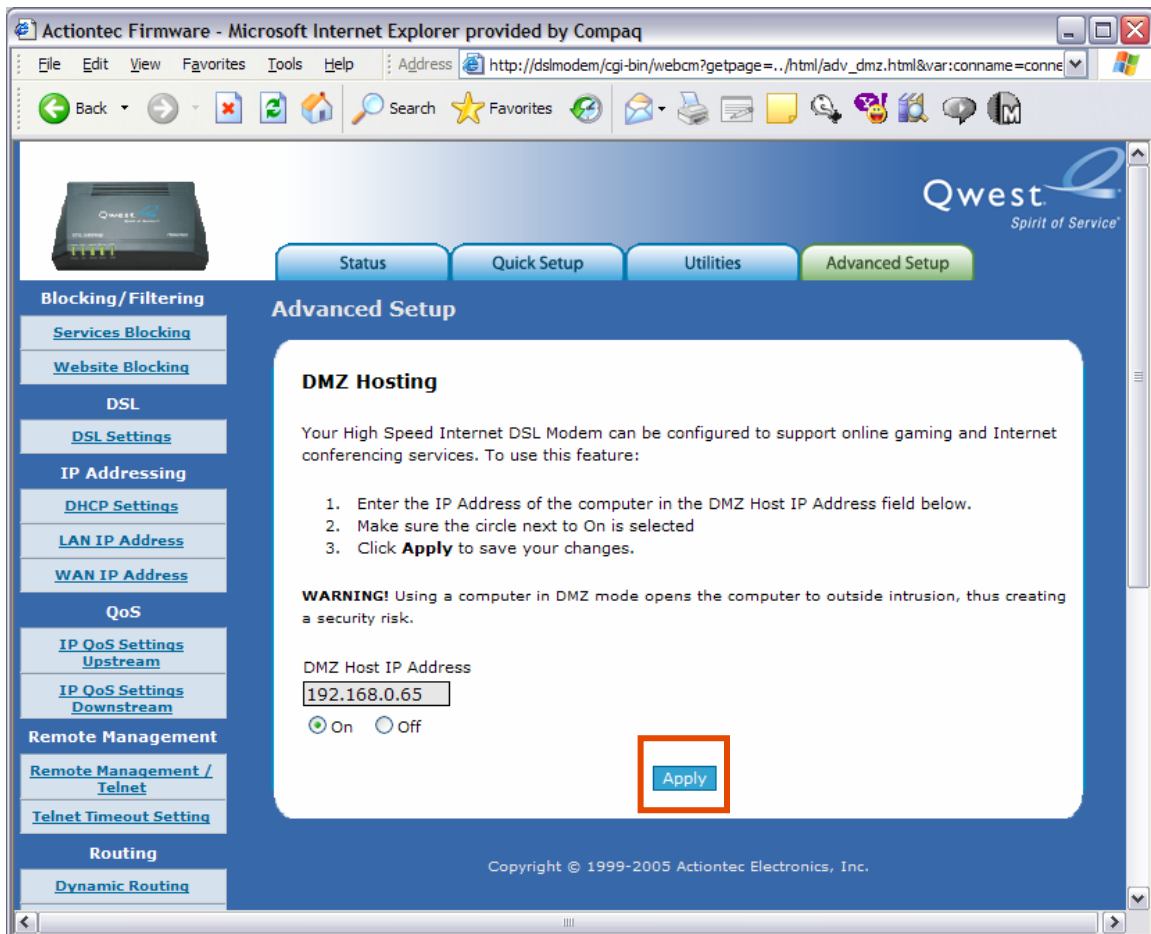

4. A “Thank You” page appears briefly. After configuration is complete, you’re automatically redirected to the “DHCP Settings” page.

